PREMIER MOUNTS™
The original holding company

PSD-VPS

NOTE: Please refer to the PSD-BW Base and RTM-L Installation Instructions for complete assembly instructions.

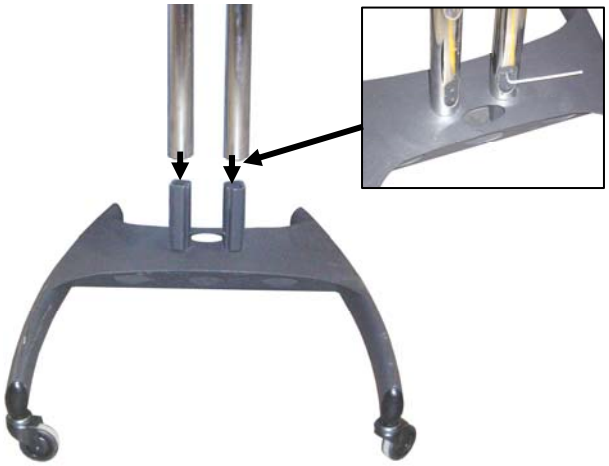

1. Attach the support tubes to the PSD-BW base and tighten the set screws with the supplied Allen wrench.

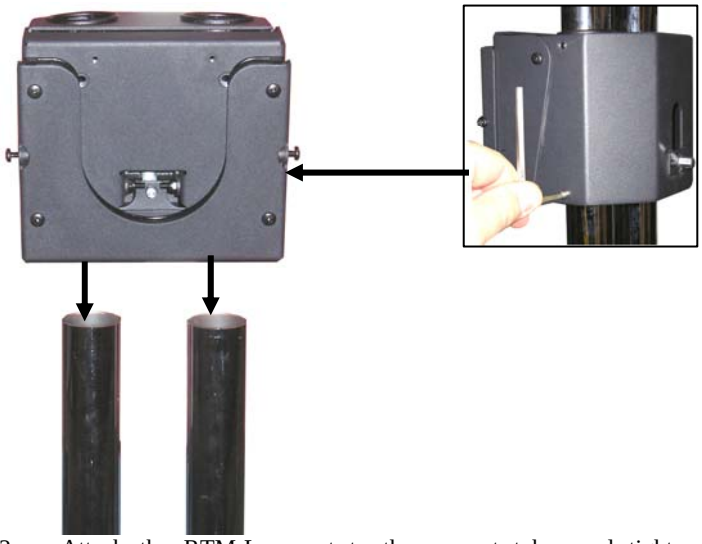

2. Attach the RTM-L mount to the support tubes and tighten the set screws with the supplied Allen wrench.

Landscape Orientation

Portrait Orientation